


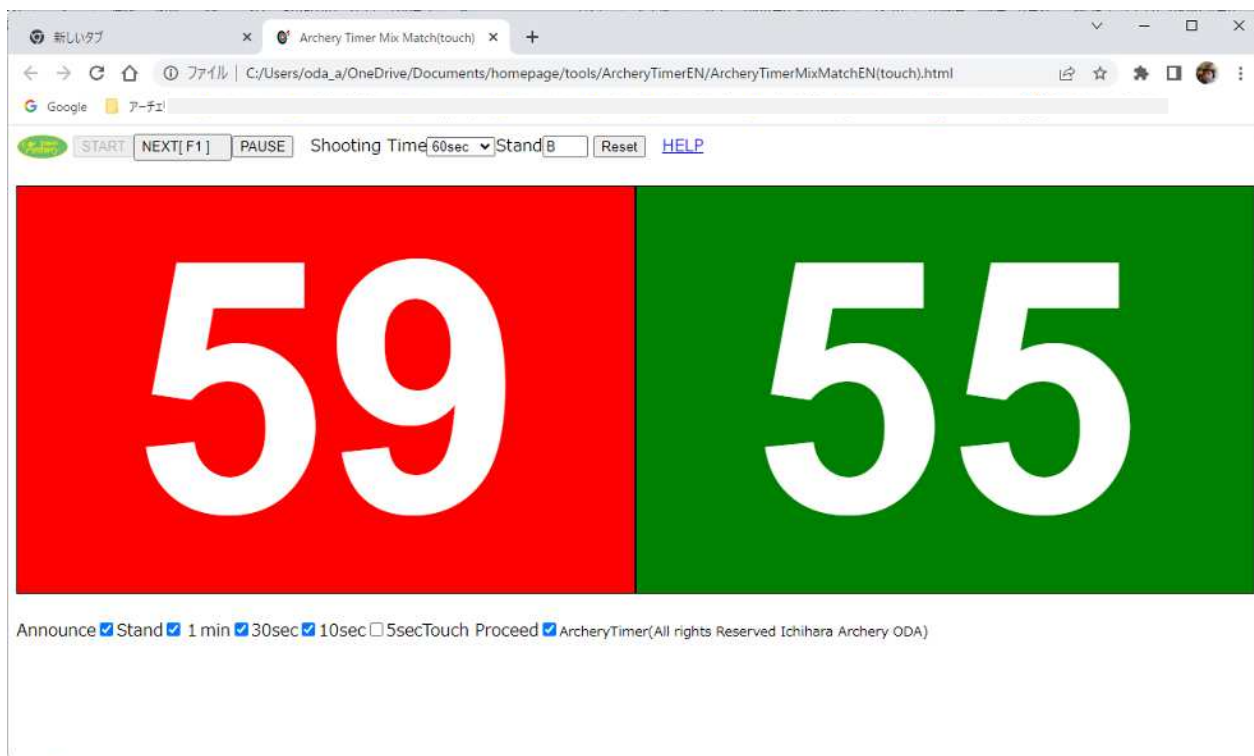

Upper Area

[START] Timer Start

[NET[F1]] NEXT STEP [F1] only for PC

[PAUSE] Timer Stop [Re-start] Re-start

[Setting Time] [sec]

[Shooting Timer] [sec]

[STAND] (A,B)

[RESET] Re-load page

Lower Area

[Announce] STAND : A、 B

1min, 30sec, 10sec, 5sec

[Touch Proceed] Screen touch mode