


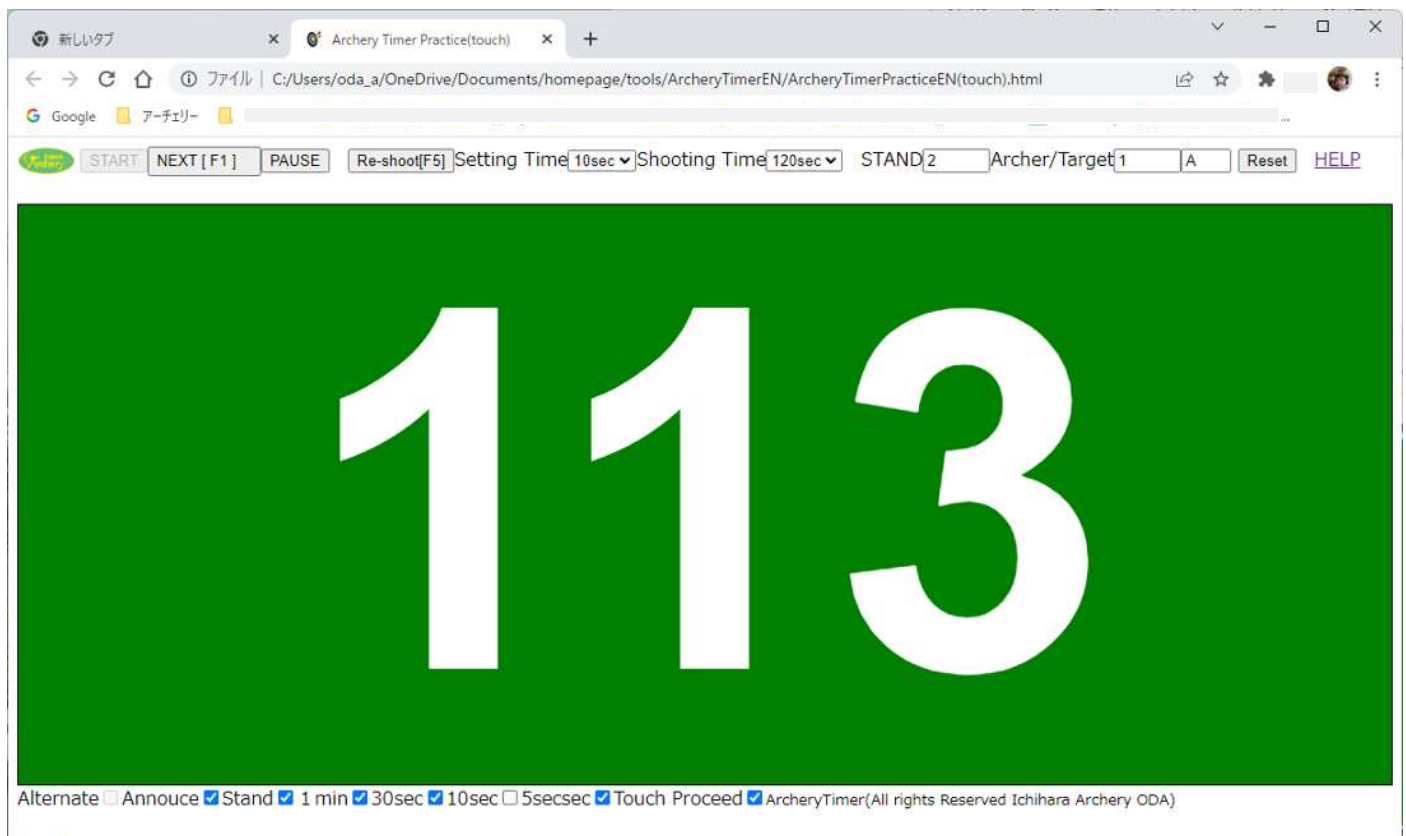

Upper Area

[START] Timer Start

[NEXT[F1]] NEXT STEP [F1] only for PC

[PAUSE] Timer Stop [Re-start] Re-start

[Re-shoot[F5]] Re shoot

[Setting Time] [sec]

[Shooting Timer] [sec]

[STAND] MAX 5 (A~E)

[Archer/Target] 1 or 2 (AB,CD,EF...) [STAND] (shooting)

[RESET] Re-load page

Lower Area

[Alternate] A→B→C C→B→A

[Announce] STAND : A、B...

1min, 30sec, 10sec, 5sec

[Touch Proceed] Screen touch mode